




Parts List

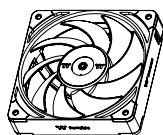

A x 3



B x 3



C x 3



D x 12



E x 12




F x 1

Installation Guide

1 Choose your fan blade type


Standard Fan Blade (Pre installed on the fan A)

Airflow Direction:
Air Exhaust





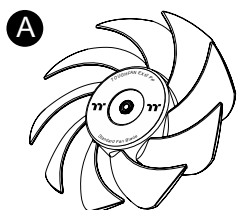


Reverse Fan Blade


Airflow Direction:
Air Intake

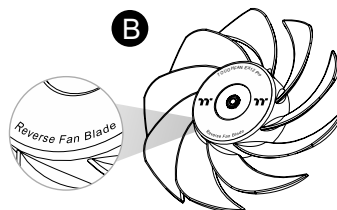

2 Replace fan blades

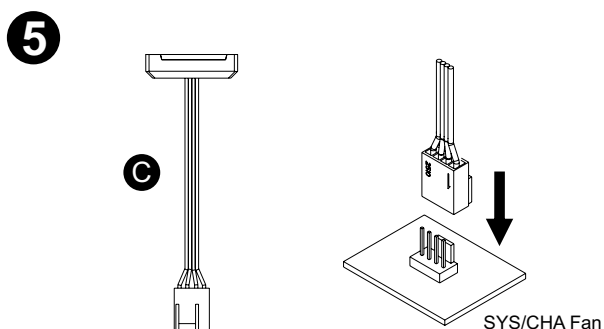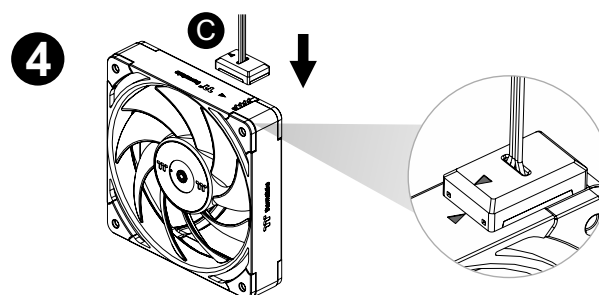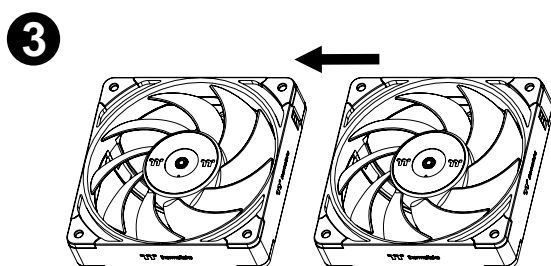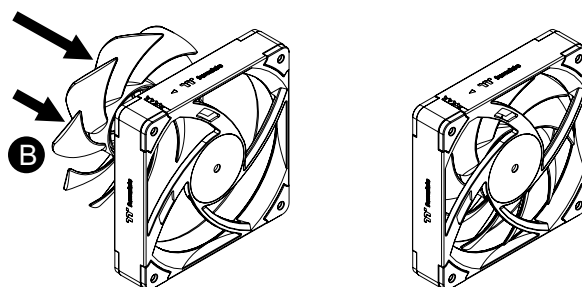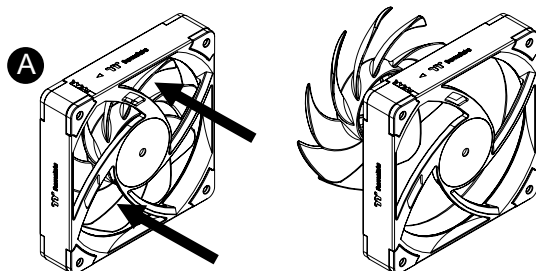

Oil Setup Guide

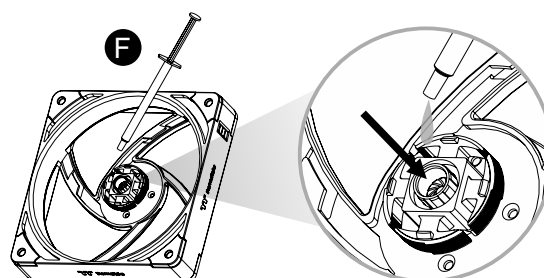

After replacing the fan blades several times, read the oil into the bearing (about 0.1ml)