 
 


HAVIT

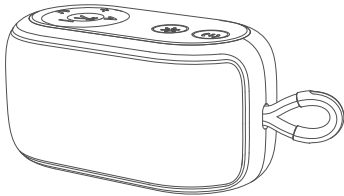

SK809BT
BLUETOOTH SPEAKER
USER MANUAL


Package Content

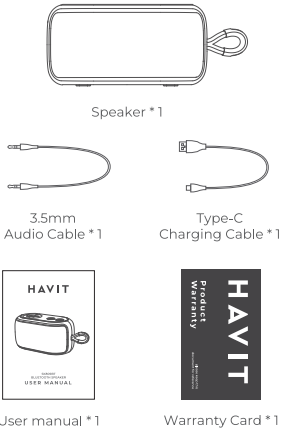

1

Product Overview


1. Power button
2. Light button
3. Play/Pause
4. Previous song
5. Next song
6. Volume up

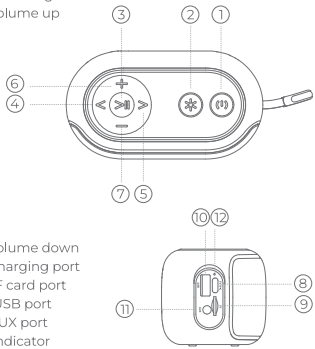

7. Volume down
8. Charging port
9. TF card port
10. USB port
11. AUX port
12. Indicator

2

Power on/Connection

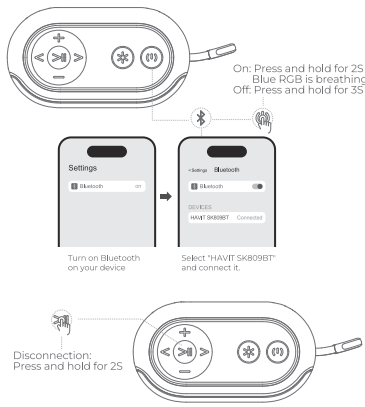

Note
The speaker will be automatically connected to the last paired device as soon as you turn it on.

3

TWS dual devices connection

- Turn on two speakers and not connect to your device.
- Press power button of any one speaker twice and there are 2 vocie prompts. After 2nd prompt, both speakers are paired each other..
- Turn on Bluetooth of your device and select "HAVIT SK809BT" to connect.

Now your device is connected to two speakers.

Function



Power On/Off		Press and hold for 2S-3S
Mode Switch		Press once

4

TWS Pairing		Press twice
Bluetooth Pairing Clear		Press and hold for 5S
RGB light off		Press and hold for 2S
RGB effect		Press once
Voice assistant		Press twice
Play/Pause		Press once
Bluetooth Disconnect		Press and hold for 2S
Answer/ End the call		Press once
Last number redial		Press twice
Rejec incoming calls		Press and hold for 2S
Previous song		Press once
Next song		Press once
Volume down		Press once
Volume up		Press once

5

FM mode


- Turn on the speaker and press the power button once to enter FM mode.
- Double press the play/pause button to activate the automatic search or stop searching.
- Short press the "<" / ">" to select channel.

Mode switch

Inserting TF cards,USB Flash Drive or connecting audio cable to the speaker then you can press power button to switch different mode by turn.

TF/SD card mode


Insert a card to the speaker and it can play music automatically.

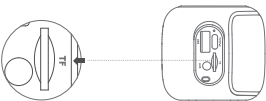

6


USB mode

Insert a USB flash drive to the speaker and it can play music automatically.

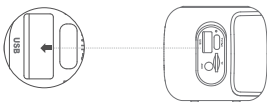

Aux in mode

Connect the speaker to a music player/mobile via 3.5mm audio cable (provide as accessory) and the music can be played automatically.

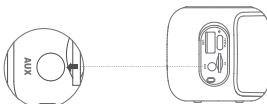


* speaker previous/next song is not available in Aux in mode.

7

Charging

Charge the case with type C charging cable , preferably from any PC or laptop as compared to a USB charger.

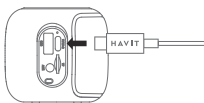

- Charging: Red indicator is on
- Full charged: Indicator is off

Reset



Press light button for 5S until the speaker is off. Reset is done.
You can turn on again to connect to the device.

8

Safety Tips

1. Please follow the instruction to operate the product.
2. Please charge the product with input power below DC 5V/1A to protect the battery
3. Do not immerse this product in any liquid or or splash any liquid on this product
4. Please store or use the product in a normal temperature environment.
5. Please keep the product from heat source, such as radiators, hot air regulators, stoves, or other heat generating instruments as it is not anti-high temperature.
6. Do not jam the ports of the product, such as charger port, LED port and TF card port
7. In order to protect your hearing and extend the product lifetime, it is not recommended to adjust the volume to the maximum level for a long time.

9

Batteries:

A warning that batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the light.
1. Replacement of a battery with an incorrect type that can defeat a safeguard.
2. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
3. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
4. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.



10



www.havitsmart.com