

**xiaomi** Smart Air Fryer 6,5 l User Manual



Read this manual carefully before use, and retain it for future reference.

Thank you for choosing Xiaomi Smart Air Fryer 6.5L. This product is for household use only.

Illustrations of product, accessories, and user interface in the user manual are for reference purposes only. Actual product and functions may vary due to product enhancements.

## Safety Instructions


- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Please keep the air fryer and the power cord out of the reach of children aged under 8.
- For household use only.
- If the power cord is damaged or broken, it must be replaced by the manufacturer or after-sales service department to avoid safety hazards.
- The temperature of the accessible surface may rise while the air fryer is working.
- The surface will heat up easily while the air fryer is in use.
- The air fryer should not be operated via an external timer or a separate remote control.
- Do not block the air fryer's air inlet and outlet, nor the heat dissipation vents during use to avoid affecting its normal heat dissipation.
- Any non-professionally trained technicians should not modify the internal wiring of the air fryer.
- Do not use charcoal or other similar fuel sources to heat the basket, frying plate, or grill.
- Do not place the basket on any other heat sources, such as an induction cooker or gas stove.
- Do not plug or unplug the power cord with wet hands to avoid the risk of an electrical shock.
- Do not use a power cord with loose connection or poor contact.
- Do not let the power cord cross through sharp objects to avoid damage to the power cord.
- Do not use the air fryer to store any items, especially flammable, explosive, or corrosive items.

- Do not excessively pinch, bend, twist, or place heavy objects on the power cord to prevent from exposing or breaking its core.
- Stop using the air fryer immediately and unplug it from the power source if it doesn't function normally or malfunctions.
- The air fryer cannot be started without the basket being in place.
- Do not touch the basket directly with your hands during or right after use to avoid getting scalded.
- Do not allow children to get close to or play with the cling wrap and packaging to avoid suffocation accidents.
- Do not use any plastic utensils or normal paper wrapping materials to wrap food for cooking.
- Do not drop this air fryer or bump it against hard objects to avoid damage or malfunction.
- Do not insert pins, wires or other objects into any of the openings of the air fryer to avoid an electrical shock or injury.
- Do not use any accessories that are not recommended by the manufacturer.
- The normal operating altitude range of this product is 0–2000 meters.
- Keep a distance of 30 cm or more between the air outlet and other devices during use.
- Do not move or shake the air fryer during use.
- Do not insert any foreign objects into the safety switch to avoid causing any danger.
- When placing the air fryer in a kitchen cabinet, etc., please ensure that it is well ventilated.
- Please be sure to unplug the air fryer before cleaning or repairing it.
- This product must be used on a level, heat-resistant surface to avoid damage to the product or accidents.
- Ensure that the silicone parts of the air fryer do not come into contact with ethanol or solutions that contain more than 50% of alcohol.
- Please ensure that the electrical outlet the air fryer is plugged into is well grounded to avoid an electrical shock or other safety hazards.



CAUTION: Hot surfaces.

# Product Overview

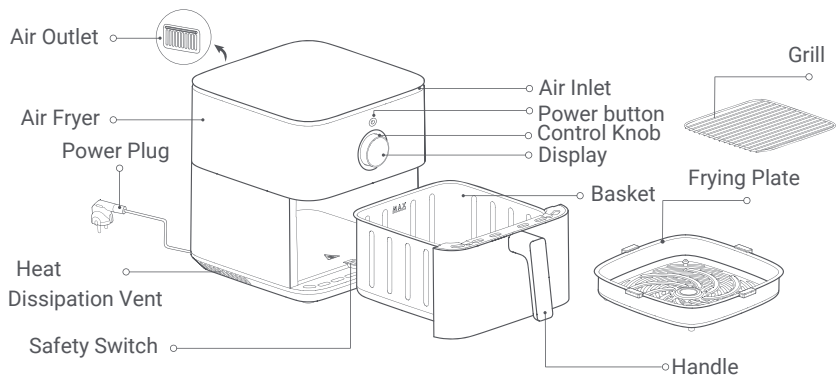

Notes: 1. The silicone rubber on the frying plate is made of high temperature resistant food-grade materials to prevent the edges of the frying plate from scratching the coating of the basket and to improve the stability of the frying plate. Do not remove the silicone rubber from the frying plate.  
2. Ingredients that are too small are not suitable for use on the grill. Please make sure that ingredients don't fall through the gaps in the grill.

## Control Knob



1 Press to confirm selection.



2 Press and hold for 1 second to return to the previous menu.



3 Turn left/right to change functions.



4 Press the power button to turn on/off.

## How to Use

Connect the power cord and press the power button to turn on the air fryer.

Notes: 1. When the air fryer is turned on for the first time, press the power button and go to the language selection screen, turn the control knob to the desired language, then press the control knob to confirm the selection.  
2. The air fryer may give off a minor odor on first use. It is recommended to run the air fryer with an empty basket at the maximum temperature (220°C) for five minutes to remove the odor. The air fryer may emit a small amount of white smoke or an odor while running with an empty basket, which is normal.

### Turning on

Connect the power cord and press the power button to turn on the air fryer.

### Turning off

Press the power button to turn off the air fryer, regardless of the state it is in.



## Configuring the Wi-Fi

- Resetting the Wi-Fi:

Press the control knob to enter "Reset Wi-Fi" while in the "Wi-Fi" screen, then press the control knob to select Yes to reset the Wi-Fi, or turn the control knob to select No to abandon resetting the Wi-Fi.

- Enabling/Disabling the Wi-Fi:

Press the control knob to enter "Enable/Disable Wi-Fi?" while in the "Wi-Fi" screen, then press the control knob to select Yes to enable or disable the Wi-Fi, or turn the control knob to select No to abandon the change.

## Wi-Fi Status Indicator

|  |  |  |  |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| Awaiting fast connection...                                                       | Reconnecting after a disconnection...                                             | Connected successfully                                                            | Updating...                                                                       |
| Wi-Fi indicator blinks slowly                                                     | Wi-Fi indicator blinks quickly                                                    | Wi-Fi indicator stays on                                                          | Wi-Fi indicator blinks quickly                                                    |

Note: If the air fryer does not connect to the Wi-Fi for 30 minutes, the Wi-Fi indicator will turn off.

## Firmware update

When you update the firmware through the Mi Home/Xiaomi Home app, the display will show that an update is in progress, and the air fryer will automatically restart when the update is completed.

Note: The Mi Home/Xiaomi Home app will be able to update the firmware unless the air fryer or its display is turned off, or the Wi-Fi is disconnected. Other operations cannot be performed when the firmware update is in progress.

## Connecting with the Mi Home/Xiaomi Home App

This product works with the Mi Home/Xiaomi Home app\*. Control your device with Mi Home/Xiaomi Home app.



- Scan the QR code to download and install the app. You will be directed to the connection setup page if the app is installed already. Or search for "Mi Home/Xiaomi Home" in the app store to download and install it.
- Open the Mi Home/Xiaomi Home app, tap "+" on the upper right, and then follow the instructions to add your device.

\* The app is referred to as Xiaomi Home app in Europe (except for Russia). The name of the app displayed on your device should be taken as the default.

Note: The version of the app might have been updated, please follow the instructions based on the current app version.

## Cooking

### Preparations

The ingredients can be marinated to taste before cooking.

## Starting a cooking program

1. Place the air fryer on a stable, level surface and ensure that there is air circulation around the air fryer.

2. Place the frying plate into the basket and add ingredients one by one. If there are more ingredients, use the grill to place them in layers.

Note: Layering ingredients without using the grill will affect the cooking.

3. When the basket is completely pushed into the air fryer, turn and press the control knob to select the manual mode or the preset recipe (yogurt, chicken wings, fries, etc.), turn and press the control knob to set the mode (crispy grill/defat, supported by certain recipes), quantity of ingredients (single layer/double layer), temperature and time, and press the control knob to start the cooking program and the cooking time countdown. For a scheduled cooking program, the air fryer will automatically start cooking at a proper time to ensure that the cooking is completed at the scheduled time.

### Notes:

1. The cooking time and temperature can be adjusted by turning the control knob during cooking, except for cooking yogurt. When cooking in the defat mode, you can only adjust the cooking time, not the cooking temperature.
2. Once you turn the control knob to adjust the cooking time or temperature, you need to press the control knob to confirm, otherwise the air fryer will continue to cook as per the original settings after five seconds.
3. You cannot change the recipe while cooking.
4. Ingredients do not need to be turned over during cooking (unless you are cooking fries). When you have selected over 500 g of fries, there will be a prompt to turn over the ingredients halfway. Follow the prompt to pull out the basket to turn over the ingredients, then place the basket completely back into the air fryer and press the control knob to continue cooking.
5. The air fryer will beep and "Completed" will appear on the display to indicate that the cooking program has been completed (for some recipes, the air fryer will enter the keeping warm state and display "Keeping warm..."). Carefully take out the basket and use clamps to remove the food.

CAUTION: When cooking is completed, the basket is very hot, so do not touch it to avoid getting scalded.

## Other Operations

### 1. Language settings

- Turn on the air fryer, go to settings, and press the control knob to enter the language selection screen.
- Turn the control knob to the desired language and press it to confirm.

### 2. Manual mode

- When the air fryer is turned on, press the control knob to enter the manual mode, then turn the control knob to the desired cooking temperature, press the control knob to set the time and turn the control knob to the desired cooking time, and finally press the control knob to start the manual cooking program.

### 3. Temperature/Time adjustment

- The temperature can be adjusted between 40°C and 220°C. The time can be adjusted between 0–24 hours.
- When adjusting the cooking time or scheduled completion time, pay attention to the speed in which you turn the control knob. When the adjusted time range is  $\geq 60$  minutes, turning the control knob quickly will adjust the time by 60 minutes, while turning the control knob slowly will adjust the time by 1 minute. When the adjusted time range is  $< 60$  minutes, turning the control knob quickly will adjust the time by 10 minutes, while turning the control knob slowly will adjust the time by 1 minute.
- The cooking temperature is adjusted by 5°C for each turn of the control knob.
- If you adjust or modify the time parameters in recipe cooking program, when the cooking temperature is between 80°C and 220°C, the adjustable cooking time is  $\leq 1$  hour; when the cooking temperature is  $< 80^\circ\text{C}$ , the adjustable cooking time is  $\leq 24$  hours.

### 4. Scheduled cooking

- Press the control knob to select the schedule function, turn the control knob to select the scheduled recipe, then set the cooking time and scheduled time. The air fryer will automatically start cooking at a proper time to ensure that the cooking is completed at the scheduled time, then enter the keeping warm state or finish cooking once done. Notes:

1. The scheduled time must be longer than the cooking time, but less than 24 hours.
2. The scheduled time here is the scheduled completion time. For example, when the screen displays 02:40, it means that cooking will complete within 2 hours and 40 minutes.
3. The schedule function is not supported in yogurt, dried fruit, and defrost modes.

## 5. Keeping warm function

- The keeping warm function is enabled by default. You can disable it in the settings.
- The keeping warm time is 30 minutes, while the keeping warm temperature is 80°C. Keeping warm and its timing will be suspended if the basket is pulled out. If you place the basket back in within 3 minutes, keeping warm will continue at the retained time settings. If the basket is not placed back within 3 minutes, keeping warm will end, and the air fryer will return to the home screen of the corresponding recipe.

CAUTION: When keeping warm is on and the cooking temperature is set to  $\geq 80^{\circ}\text{C}$ , the keeping warm operation will be performed after the cooking is completed. Otherwise, the air fryer will directly finish cooking by entering the cooking completed screen.

## 6. Pause/Cancel cooking

- When the air fryer is in cooking mode, press the control knob to pause cooking.

When the air fryer is cooking or paused, press and hold the control knob for one second to enter the canceling cooking screen. Select Yes to cancel cooking and enter the manual mode screen.

CAUTION: During cooking, you can turn the control knob to adjust the temperature and time parameters.

The corresponding numbers will blink during adjustment. Once adjustment is completed, press the control knob to confirm the new parameters.

## 7. Cloud recipe mode

- If you select and execute a cloud recipe with the Mi Home/Xiaomi Home app, the will cook automatically according to the recipe. After cooking, the air fryer will enter the air fryer manual mode screen.

Notes:

1. When executing cloud recipes, you can select the schedule function.
2. You cannot execute cloud recipes in the following situations:
  - 1) The air fryer or its display is turned off.
  - 2) There is no Wi-Fi connection.
  - 3) The air fryer is cooking, keeping warm, or in scheduled mode.
  - 4) The basket has been pulled out.

## 8. Error message

- When the air fryer detects an error, the display will show "E1" or "E2", and the air fryer will emit three brief beeps.

## Cleaning & Maintenance

Unplug the power cord before cleaning and maintaining the air fryer, and wait for it to cool down to a safe temperature before proceeding. Please remove the basket from the air fryer when cleaning the air fryer.

- **Air fryer surface:**

The surface of the air fryer can be wiped with a dry, soft cloth or a sponge moistened with a neutral cleaning detergent.

- **Cavity:**

To remove stains from the inside of the air fryer, apply a suitable amount of detergent diluted in hot water to its surface and let it sit for about ten minutes, then use a soft sponge moistened with water to wipe away the detergent residue.

- **Basket:**

Clean the air fryer after each use. The basket of the air fryer is coated, so do not use any steel wool or other abrasive cleaning materials to clean it as they may damage the coating.

- **Frying plate and grill:**

You can use a soft, cotton cloth or sponge moistened with neutral detergent to wipe it clean, then moisten it with water to wipe away the detergent residue.

**Note:** The frying plate and grill can be separated and placed in the dishwasher for cleaning; the basket can be washed in water, and can be cleaned in dishwasher; however, the air fryer can neither be washed in water nor be cleaned in dishwasher.

## Cleaning Precautions

1. After using the air fryer, please unplug the power plug in time and do not place the air fryer near a source of fire nor immerse it in water. Do not place the power plug directly on the air fryer to prevent the plug from scratching its surface.

2. Cleaning and maintenance should only be done after the air fryer has cooled down.

3. Do not use any corrosive or abrasive cleaning materials or detergents.

**Note:** Regular cleaning and maintenance of the air fryer will help extend its service life.

## Maintenance Tips

- Only professionally trained and qualified technicians should repair the air fryer.
- Others should not repair the air fryer without permission to avoid serious consequences.
- When the air fryer is acting abnormally, please refer to the Troubleshooting before contacting after-sales service team.
- If the issue cannot be resolved, please unplug the power cord and disconnect it and contact after-sales service team.

# Troubleshooting

| Issue                                                | Possible Causes                                                                | Solutions                                                                                    |
|------------------------------------------------------|--------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| The air fryer doesn't function.                      | The air fryer is not connected to a power supply.                              | Plug the power cord into a grounded electrical outlet.                                       |
|                                                      | The basket is not pushed into place.                                           | Pull out the basket and push it back into place.                                             |
| Display shows E1.                                    | The sensor has a broken circuit.                                               | Contact the after-sales service team.                                                        |
| Display shows E2.                                    | The sensor has a short circuit.                                                | Contact the after-sales service team.                                                        |
| The fan doesn't rotate.                              | The fan blade is stuck.                                                        | Contact the after-sales service team.                                                        |
|                                                      | The motor is damaged or other components have a broken circuit.                | Contact the after-sales service team.                                                        |
| White smoke is coming out.                           | Cooking oily ingredients.                                                      | When you fry ingredients containing more fat, there will be a lot of smoke, which is normal. |
|                                                      | The air fryer still contains grease residue from the previous cooking program. | Ensure that you clean the fryer after each cooking air program.                              |
| Can't insert the basket into the air fryer smoothly. | Too many ingredients in the basket.                                            | The ingredients in the basket can't exceed the maximum mark.                                 |
|                                                      | The basket is not properly inserted.                                           | Properly insert the basket.                                                                  |
| The schedule function doesn't function as requested. | The scheduled time is too short.                                               | The scheduled time should be longer than the cooking time.                                   |
|                                                      | The scheduled time is not saved.                                               | The scheduled time should be saved and carried out by pressing the control knob.             |
| Wi-Fi can't be connected.                            | The Mi Home/Xiaomi Home app is not the latest version.                         | Update the Mi Home/Xiaomi Home app to the latest version.                                    |
|                                                      | The Wi-Fi signal is weak.                                                      | Move to a location where the signal is strong enough.                                        |
| Unable to connect the air fryer.                     | Wi-Fi cannot be connected.                                                     | Check whether the Wi-Fi is connected normally or reset the Wi-Fi to reconnect.               |

# Specifications

|                                                        |                                        |                      |
|--------------------------------------------------------|----------------------------------------|----------------------|
| Name: Oven (Air Fryer)                                 | Capacity: 6.5 L                        | Color: White         |
| Model: MAF10                                           | Rated Frequency: 50–60 Hz              | Net Weight: 5.4 kg   |
| Rated Power: 1800 W                                    | Rated Voltage: 220–240 V~              | Gross Weight: 6.5 kg |
| Maximum Output Power: < 20 dBm                         | Package Dimensions: 425 × 330 × 355 mm |                      |
| Operating Temperature: -10°C to 40°C                   | Operating Frequency: 2412–2472 MHz     |                      |
| Wireless Connectivity: Wi-Fi IEEE 802.11 b/g/n 2.4 GHz |                                        |                      |

Under normal use of condition, this equipment should be kept a separation distance of at least 20 cm between the antenna and the body of the user.

 Hereby, Ningbo Careline Electric Appliance Co., Ltd. declares that the radio equipment type Oven (Air Fryer) MAF10 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <http://www.mi.com/global/service/support/declaration.html>

For detailed e-manual, please go to [www.mi.com/global/service/userguide](http://www.mi.com/global/service/userguide)



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

Manufactured for: Xiaomi Communications Co., Ltd.  
Manufactured by: Ningbo Careline Electric Appliance Co., Ltd.  
(a Mi Ecosystem company)  
Address: No.558, Wei'er Road, Andong Industrial Zone,  
Hangzhou Bay New Area , Ningbo, 315327, Zhejiang, China  
For further information, please go to [www.mi.com](http://www.mi.com)

User Manual Version: V1.0

Importer:  
Beryko s.r.o.  
Pod Vinicemi 931/2, 301 00 Plzeň  
[www.berkyo.cz](http://www.berkyo.cz)